



<https://www.kebbyindustries.com/?SID=upnhcfvnocuka272eb6v15q481>

[View Cart](#) [\(checkout/cart/\)](#) | [My Account \(/customer/account/\)](#) | [Log In \(/customer/account/login/\)](#)

[Home \(/\)](#) / [Resources \(/resources\)](#) / Cap Sizes & Styles

Cap Sizes & Styles

Types of Crimpers

Spray Pump Crimpers

These crimpers are specifically for capping perfume bottles and other bottles using crimp type spray pumps or atomizer pumps. Commonly used for cosmetic packaging. Available for spray pumps in sizes 13mm, 15mm, 18mm, and 20mm. We recommend sending samples for testing prior to purchasing your crimpers. Most reputable component companies will provide samples of the bottles and pumps you are considering, prior to purchasing them.

CALL FOR PRICING AND AVAILABILITY



Vial Cap Crimpers

These vial cap crimpers are designed for use with lined, and unlined; one piece aluminum, steel, and bi-metal crimp seals. These crimp caps and seals are commonly used for gas, liquid, and high-performance liquid chromatography (gc, lc, hplc) applications. Other areas of use include, small and large volume parenterals. Vial cap crimpers are available in sizes ranging from 7.3mm to 32mm.



Flip-Off Cap Crimpers

Flip off vial crimpers are designed specifically for crimping flip off seals which consist of an aluminum shell and a plastic round button on the top of the aluminum crimp seal which covers the injection site of the vial. The plastic button has a larger diameter than the aluminum seal it is connected to. Flip off cap crimpers are available in sizes ranging from 13mm to 30mm. (32mm - 43mm size also available, upon request)




Flip Tear Off Cap Crimpers

This group of crimpers are designed specifically for crimping flip tear off type crimp seals, which consist of an aluminum shell and a plastic round button similar to the standard flip off type seals, but with a thumb tab protruding from the side of the button. The plastic button, with side tab has a larger diameter than the aluminum seal it is connected to. These cap crimpers are available for sizes ranging from 13mm to 32mm.

CALL FOR PRICING AND AVAILABILITY




The following Kebby products can be used with Flip Tear Off Caps:



Cap Cross Reference

Use this guide to help you determine what type of cap you're using.

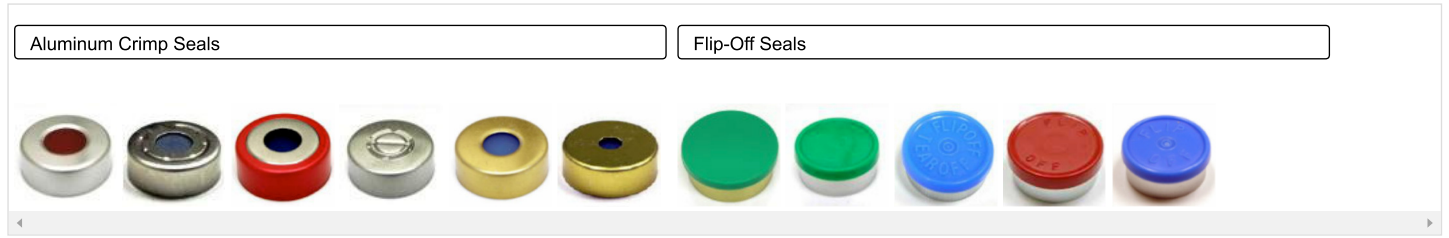

Finding the Correct Crimper/Decapper Size for Your Cap

To determine your cap's size, measure the inside diameter of the base of the cap as depicted in the diagrams below.

8mm	11mm	13mm
View Kebby Products for 8mm Caps (/store.html?cap_seal_size=31)	View Kebby Products for 11mm Caps (/store.html?cap_seal_size=30)	View Kebby Products for 13mm Caps (/store.h
28mm	30mm	32mm
View Kebby Products for 28mm Caps (/store.html?cap_seal_size=27)	View Kebby Products for 30mm Caps (/store.html?cap_seal_size=26)	View Kebby Products for 32mm Caps (/store.h

Page Topics

- [Types of Crimpers](#)
- [Cap Cross Reference](#)
- [Finding Your Cap Size](#)

Kebby Industries Inc
4075 Kilburn Avenue | Rockford IL 61101
p: (815) 963-1466

[Contact Us \(/contact\)](#)

Site By: [PUREi \(http://www.purei.com\)](http://www.purei.com)